



PRODUCT: JK Wrangler Interior Storage Rack

REV: A | 04-30-2021 | R76000

READ INSTRUCTIONS IN FULL BEFORE INSTALLATION.
QUESTIONS? CALL 916-760-4575 M-F 7:00 AM – 5:00 PM PST

The ARS experience includes the ease of installation of our products. We design for most contingencies, but installation may be different based on different Jeep condition, configuration and/or year.

We are continually trying to improve our products and instructions – please help us by providing feedback and pictures if you find any part of the instructions that do not match your Jeep or are not easily understandable.

If you have any difficulties at all, please give us a call. Thank you and enjoy your ARS Products!

IMPORTANT NOTE: We use Stainless Steel Hardware where possible. Therefore, a tube of Silver Anti-seize is provided and should be used on all bolts—only a small amount is needed.

WARRANTY INFORMATION: This article is sold without warranty expressed or implied. No warranty or representation is made as to this products ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this equipment are directly related to the way it is INSTALLED, USED and/or MAINTAINED. THE USER ASSUMES ALL RISK. By purchasing this product and opening the packaging, purchasers expressly acknowledge, understand and agree that they take, select and purchase these ARS products from Armored Works, LLC, its affiliates and distributors and agents as is and with all faults. The entire risk as to the quality and performance of these ARS products is with the purchaser. Working on your vehicle can be a dangerous activity. If you are unsure of what you are doing, please leave mechanical or safety critical work to a skilled mechanic. We take no responsibility for the incorrect use and/or installation of ARS products.

Section 1: Tools & Notes on Installation



Tools Required: This list is the recommended tools for ease of installation. Other versions of the same tool can be used. For example, Allen Wrenches instead of Allen Drive Sockets.



T40 Torx Wrench

5/8" Socket or Wrench
11/16" Socket or Wrench



HOW TO USE THIS GUIDE: The installation guide contains ALL steps for installation. Please read and follow the instructions in order of each page top to bottom and left to right.

Jeep Model: Instructions may apply to multiple Jeep models but are labeled separately where appropriate (i.e. TJ vs. LJ).

Options: Because of the number of component options we offer, these instructions may contain steps that will not match your configuration. You can skip these steps.

Images: Pictures are provided, and parts are labeled throughout the instructions. Each text box contains guidance based on the pictures next to it. The text will refer to alphabetical labels (A, B, etc.) found in the images.

Installation Notes: Terms may be used in the body of the instructions that you may not be familiar with, if you have any questions feel free to contact us at the number below, or email techhelp@metalcloak.com

QUESTIONS: Any questions or comments about the instructions? Call us at 916-760-4575 M-F 7:00 AM – 5:00 PM PST.

Section 2: Product Components



DC-0001 REV A

SHEET 1 OF 2

ITEM	PART NUMBER/DESCRIPTION	QTY.
1	FS-07059 SERRATED FLANGE LOCK NUT, 0.44-14 X 0.39H STL GF ZINC	6
2	FS-07281 WASHER, 0.47ID X 0.92OD X 0.06TH STL ZINC	6
3	FS-07282 HHCS, 0.44-14 X 0.88L STL G5 ZINC	6
4	WM-7055 WELDMENT, REAR INTERIOR STORAGE RACK BASE, UNIVERSAL	1
5	WM-7056 WELDMENT, REAR INTERIOR STORAGE RACK SIDE, JK	1
6	WM-7056-P WELDMENT, REAR INTERIOR STORAGE RACK SIDE, JK	1

THE INFORMATION CONTAINED ON THIS DRAWING IS THE EXCLUSIVE PROPERTY OF ARMORED WORKS, LLC. UNAUTHORIZED REPRODUCTION IS PROHIBITED.
DO NOT SCALE DRAWING

Metal Cloak
 A DIVISION OF ARMORED WORKS, LLC


PART NUMBER/DESCRIPTION
 R76000 REAR INTERIOR STORAGE RACK, JK



Section 3: Installation Instructions

Step 1: Install the Interior Storage Side Panels



Important Note: *If you have a rear seat aftermarket recline the front bolt will install in hole 1. If you do not have a aftermarket recline the front bolt will install into hole 2.*

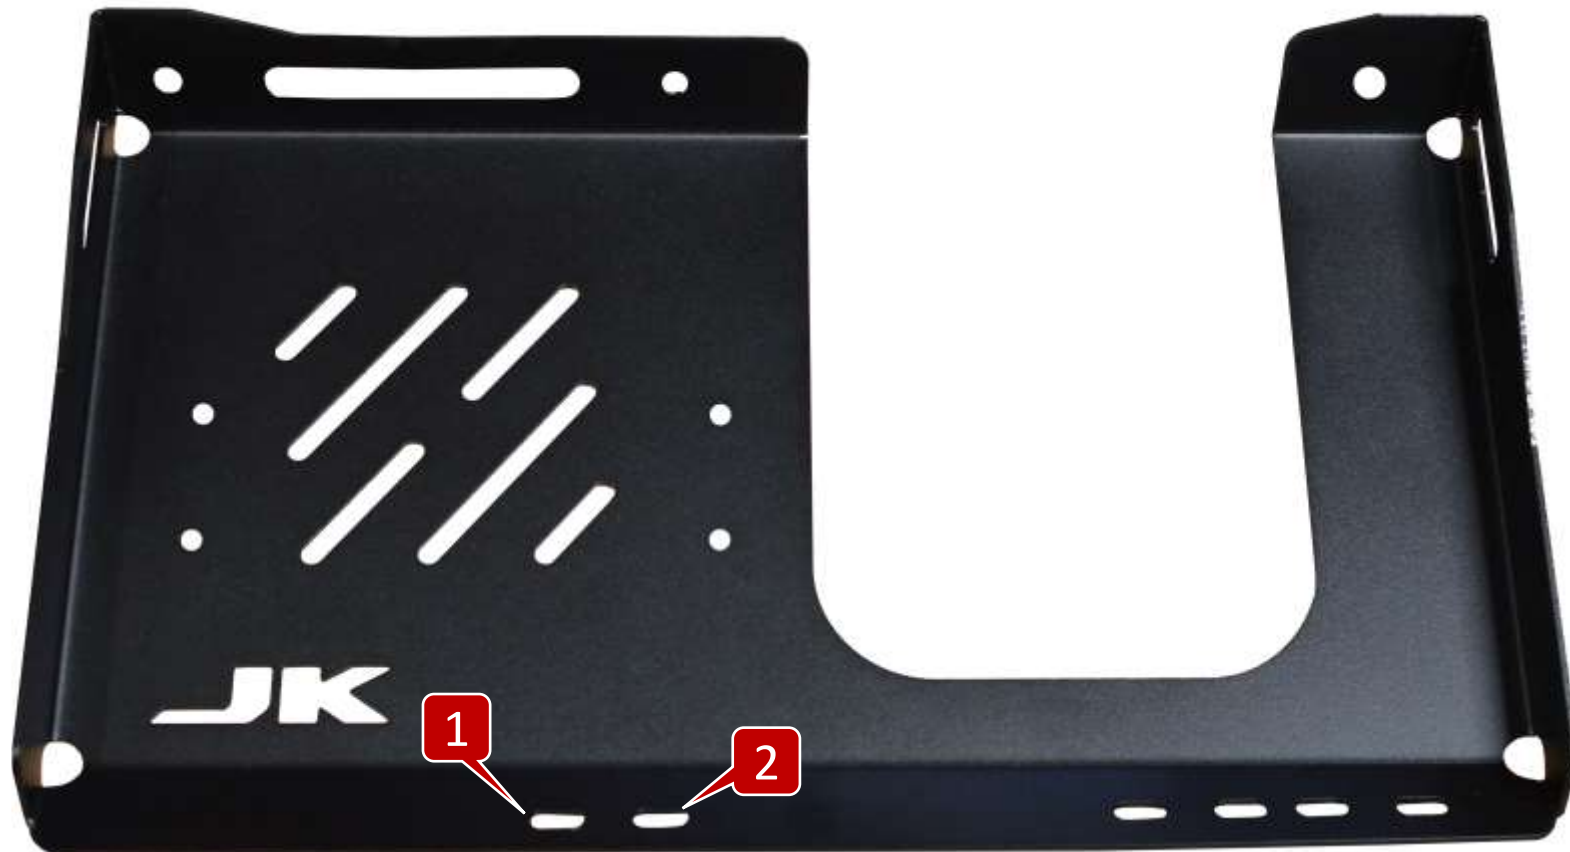

Section 3: Installation Instructions

Step 1: Install the Interior Storage Side Panels

- A. Lower the back seat to gain better access for installation.
- B. Using a T40 torx socket or wrench remove the two rear roof bolts. **SAVE ALL HARDWARE.**
- C. Install the storage side panels by sliding the panel behind the rear roll bar and lean inboard to secure the panel with the stock T40 bolts. Do not fully tighten.

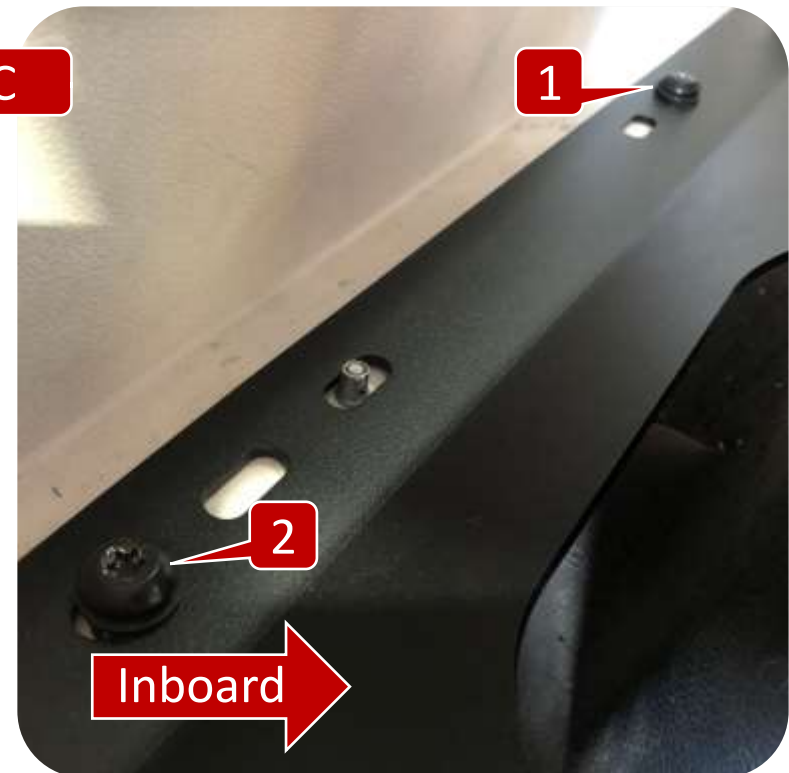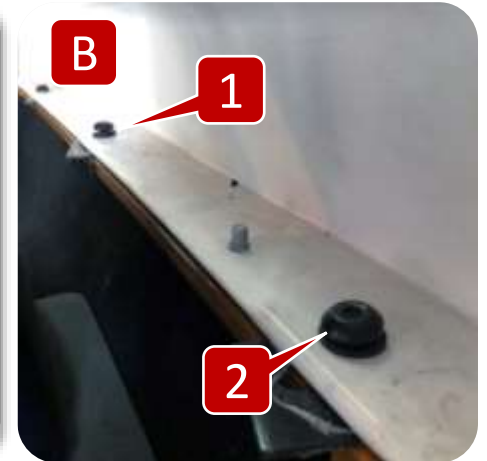

Section 3: Installation Instructions



Step 2: Install the Interior Storage Base

- D. Loosely install the storage rack base to the side panels using the provided nuts bolts and washers (*Start with the bolts closest to the tailgate and work your way forward towards the seat*). MetalCloak recommends having a second pair of hands help you install the base.
- E. Push the whole storage rack back towards the rear window and make sure the storage system clears the rear seat.



Section 3: Installation Instructions



Step 3: Tighten Hardware

- F. Using a 45T torx wrench or socket tighten the side panel bolts.
- G. Using a 11/16 and 5/8 wrench or socket tighten the six storage base bolts.

