



Installation Instructions



PRODUCT: JK Rocker Exo-Skins

REV: B | 06-29-2015 | II-3311/3316

**READ INSTRUCTIONS IN FULL BEFORE INSTALLATION.
QUESTIONS? CALL 916-631-8071 M-F 7:00 AM – 5:00 PM PST**

The MetalCloak experience includes the ease of installation of our products. We design for most contingencies, but installation may be different based on different Jeep condition, configuration and/or year.

We are continually trying to improve our products and instructions – please help us by providing feedback and pictures if you find any part of the instructions that do not match your particular Jeep or are not easily understandable.

If you have any difficulties at all, please give us a call. Thank you and enjoy your MetalCloak Products!

IMPORTANT NOTE: We use Stainless Steel Hardware where possible. Therefore, a tube of Silver Anti-seize is provided and should be used on all bolts—only a small amount is needed.

WARRANTY INFORMATION: This article is sold without warranty expressed or implied. No warranty or representation is made as to this products ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this equipment are directly related to the manner in which it is INSTALLED, USED and/or MAINTAINED. THE USER ASSUMES ALL RISK. By purchasing this product and opening the packaging, purchasers expressly acknowledge, understand and agree that they take, select and purchase these MetalCloak products from Armored Works, LLC, its affiliates and distributors and agents as is and with all faults. The entire risk as to the quality and performance of these MetalCloak products is with the purchaser. Working on your vehicle can be a dangerous activity. If you are unsure of what you are doing, please leave mechanical or safety critical work to a skilled mechanic. We take no responsibility for the incorrect use and/or installation of MetalCloak products.

Section 1: Tools & Notes on Installation

Tools Required: This list is the recommended tools for ease of installation. Other versions of the same tool can be used. For example, Allen Wrenches instead of Allen Drive Sockets. Be sure to use metric on metric and SAE on SAE.



Socket & Ratchet Wrench

9/16" Hex Drive Socket
10mm Hex Drive Socket
13mm Hex Drive Socket



1/8" Drill 3/8" Drill
7/16" Drill 17/32" Drill

7/32" Allen Drive Socket or Wrench



Center Punch

11/16" Crescent or Box Wrench



Clamps

HOW TO USE THIS GUIDE: The installation guide contains ALL steps for installation. Please read and follow the instructions in order of each page top to bottom, and left to right.

Jeep Model: Instructions may apply to multiple Jeep models, but are labeled separately where appropriate (i.e. TJ vs. LJ).

Options: Because of the number of component options we offer, these instructions may contain steps that will not match your particular configuration. You can skip these steps.

Images: Pictures are provided and parts are labeled throughout the instructions. Each text box contains guidance based on the pictures next to it. The text will refer to alphabetical labels (A, B, etc.) found in the images.


Installation Notes: Terms may be used in the body of the instructions that you may not be familiar with, if you have any questions feel free to contact us at the number below, or email techhelp@metalcloak.com

QUESTIONS: Any questions or comments about the instructions? Call us at 916-631-8071 M-F 7:00 AM – 5:00 PM PST.

Section 3: Product Components


DC-0002 REV 9 SHEET 1 OF 1

NO.	PART NUMBER/DESCRIPTION	QTY.
1	CP-3005 PANEL, EXO-SKIN, JK	1
2	CP-3005-P PANEL, EXO-SKIN, JK	1
3	FA-1000 EPDM GASKET, EXO-SKIN, JK	2
4	CP-0079 INSTALLATION TOOL, .375-16 RIVET NUT	1
5	FA-0057 RIVET NUT, .375-16 OPEN END ZYC PLTD	22
6	FA-0004-BZ SBHCSCREW, .375-16x.75L GR 8 BLACK ZINC	22

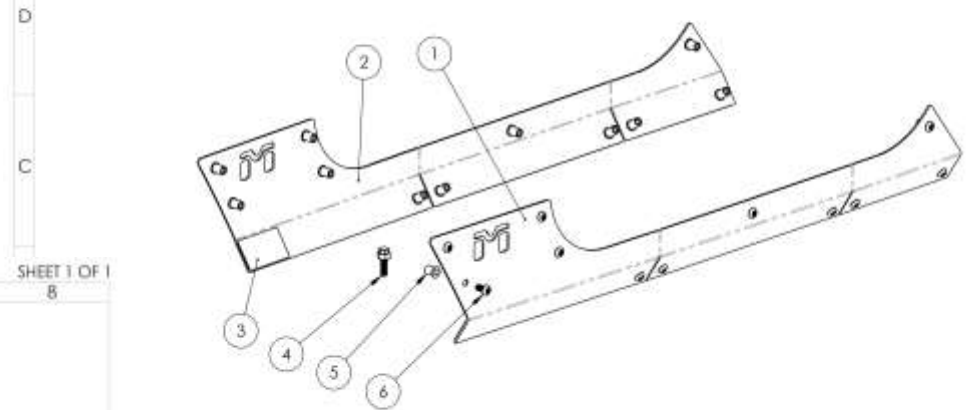

DC-0002 REV 9 SHEET 1 OF 1

NO.	PART NUMBER/DESCRIPTION	QTY.
1	CP-3004 PANEL, EXO-SKIN, JK UNL	1
2	CP-3004-P PANEL, EXO-SKIN, JK UNL	1
3	FA-1000 EPDM GASKET, EXO-SKIN, JK	2
4	CP-0079 INSTALLATION TOOL, .375-16 RIVET NUT	1
5	FA-0057 RIVET NUT, .375-16 OPEN END ZYC PLTD	34
6	FA-0004-BZ SBHCSCREW, .375-16x.75L GR 8 BLACK ZINC	34

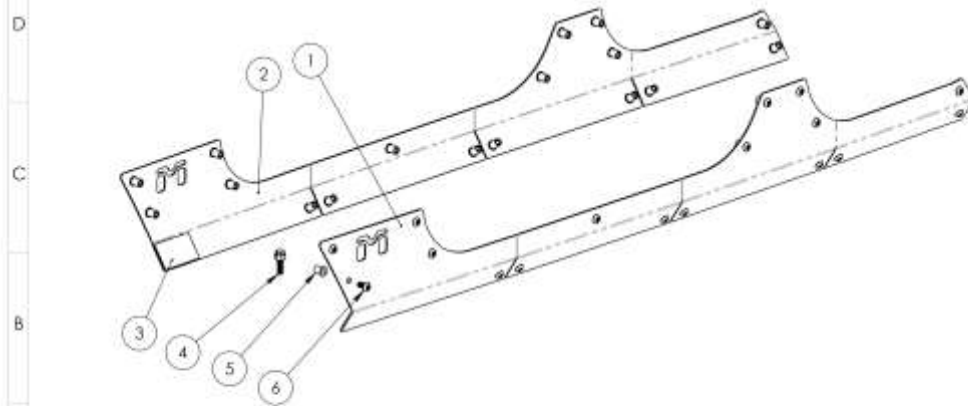

THE INFORMATION CONTAINED IN THIS DOCUMENT IS THE SOLE AND EXCLUSIVE PROPERTY OF ARMORED WORKS, LLC. ANY REPRODUCTION OF THIS DOCUMENT WITHOUT THE WRITTEN PERMISSION OF ARMORED WORKS, LLC IS STRICTLY PROHIBITED. METALCLOAK IS A DIVISION OF ARMORED WORKS, LLC. FOR MORE PRODUCT INFORMATION GO TO WWW.METALCLOAK.COM

Metal Cloak
3316 ROCKER EXO-SKIN, JK UNL

REVISION [A][BAM][10/27/10] PART NUMBER DESCRIPTION

THE INFORMATION CONTAINED IN THIS DOCUMENT IS THE SOLE AND EXCLUSIVE PROPERTY OF ARMORED WORKS, LLC. ANY REPRODUCTION OF THIS DOCUMENT WITHOUT THE WRITTEN PERMISSION OF ARMORED WORKS, LLC IS STRICTLY PROHIBITED. METALCLOAK IS A DIVISION OF ARMORED WORKS, LLC. FOR MORE PRODUCT INFORMATION GO TO WWW.METALCLOAK.COM


Metal Cloak
3311 ROCKER EXO-SKIN, JK

REVISION [A][BAM][11/18/10] PART NUMBER DESCRIPTION

Section 2: Jeep Preparation

Step 1: Remove Stock Rocker and Align Rocker Exo-Skin


- A. Remove stock rocker on your jeep using a 10mm socket to remove the stock nuts, and a 13mm socket to remove the stock bolt on the underside of the rocker. For a 2-Door models there are 2 positions as shown, and 3 on the 4-Door.
- B. Align rocker exo-skin with the bottom of the door and clamp.

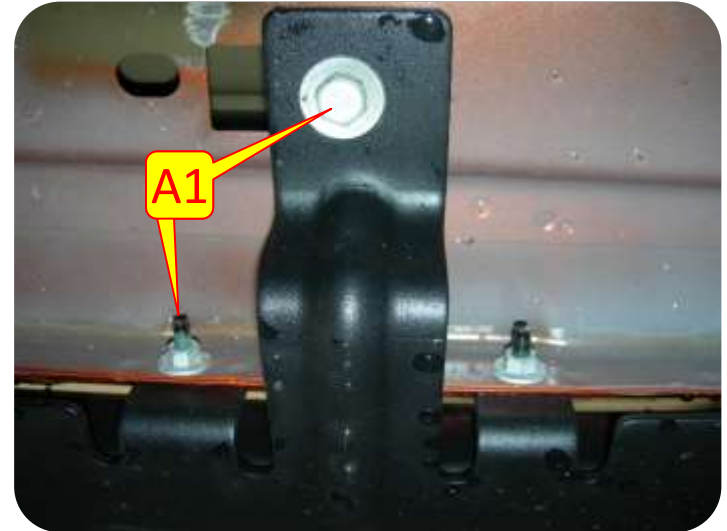

Section 2: Jeep Preparation

Step 2: Install Rocker Exo-Skin

- C. Mark each bolt hole with center punch.
- D. Unclamp and remove rocker exo-skin from side of Jeep.
- E. Start drilling bolt holes starting with the 1/8" drill bit stepping up (1/8" drill bit, 3/8" drill bit, 7/16" drill bit, 7/32" drill bit) to the final hole size being 17/32".
- F. Use a 11/16" box wrench and a 9/16" socket or box wrench to install rivet nuts using the provided rivet nut tool. **DO NOT FOR GET THE LOCK WASHER WHEN INSTALLING THE RIVET NUTS.**

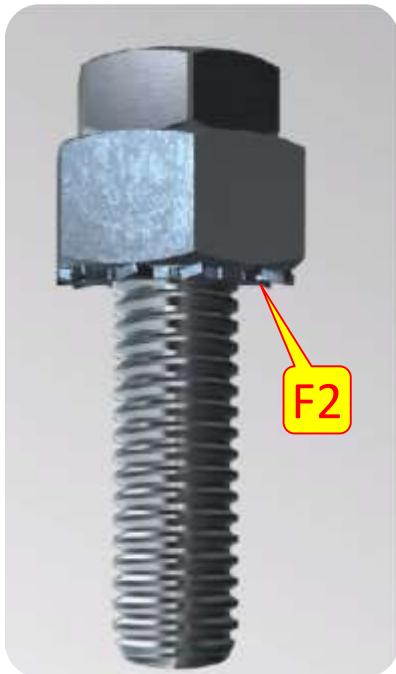

Section 2: Jeep Preparation

Step 2: Install Rocker Exo-Skin



- G. Place provided rubber gasket on the inside of the front end of rocker exo-skin.
- H. Remount and clamp rocker exo-skin to Jeep aligning with the drilled out holes.
- I. Install provided bolts using a 7/32" hex drive socket and tighten.
- J. Re-install stock rocker rail. **If re-installing stock rocker rail you may have to space stock rocker rail 3/16" for re-installation.**

